

Foam Pad

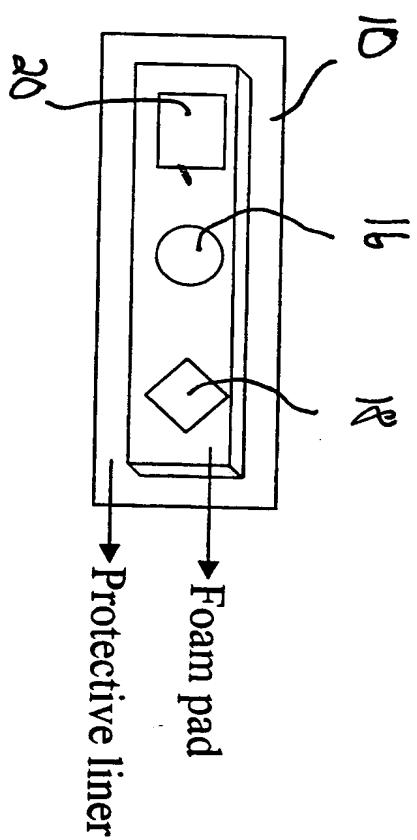


FIGURE 1

- Negative control well
- Test well
- Positive control well

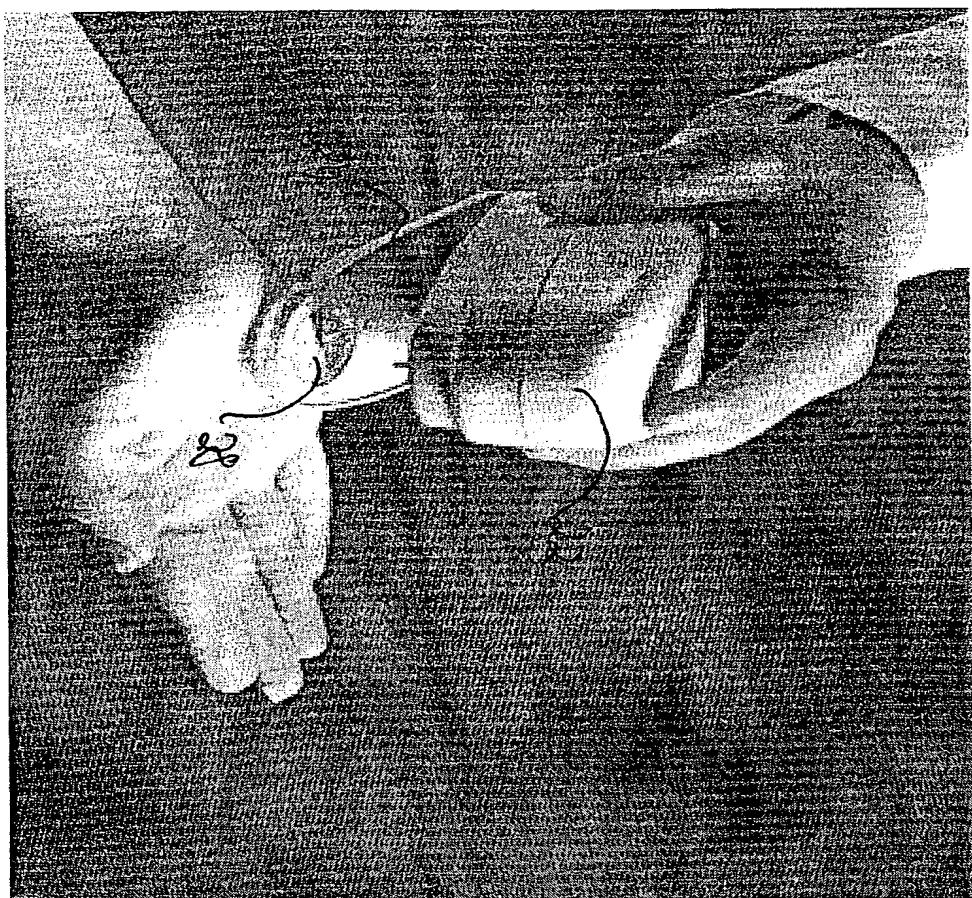


FIGURE 2

Open Spectrophotometer on Palm

The spectrophotometer is placed on the foam pad on the palm at the end of the test such that the target window on the spectrophotometer aligns with the round center well on the foam pad.

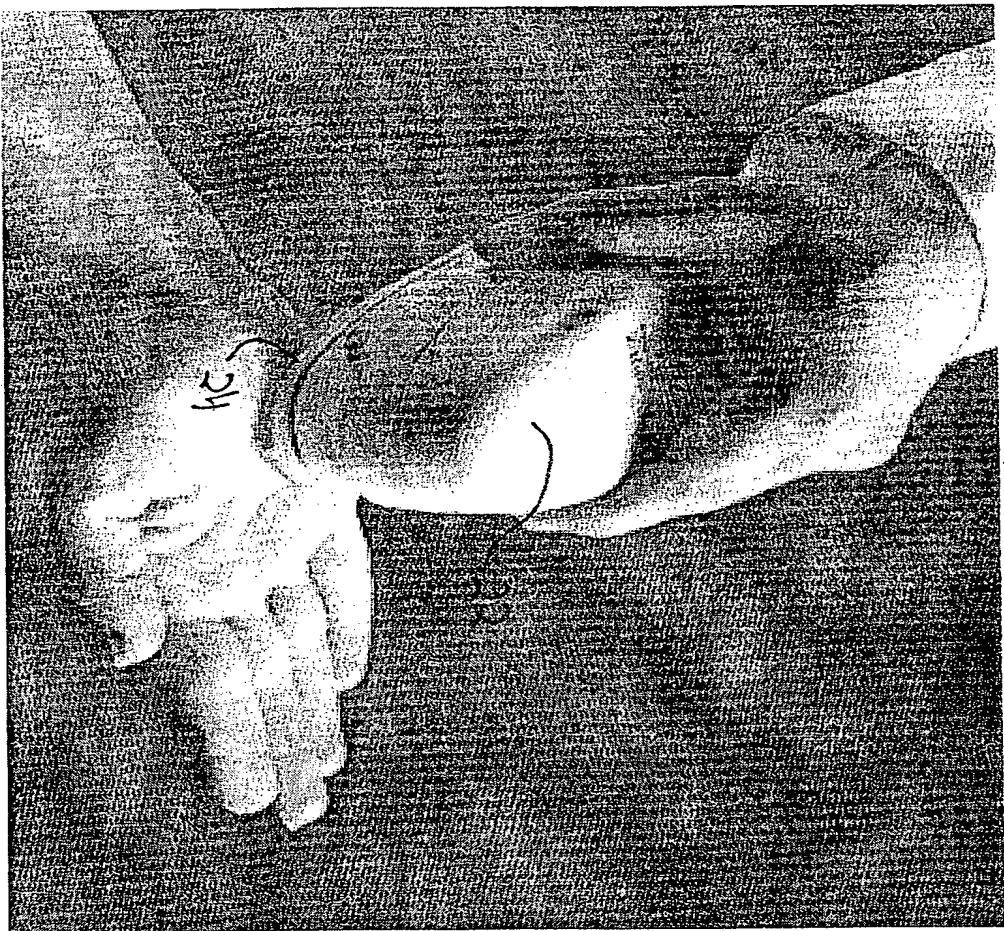


FIGURE 3

Closed Spectrophotometer on Palm

After proper positioning of the device, it is closed to activate the spectrophotometer. This results in measuring the patient's skin cholesterol (hue angle of the colour development in the test well).

09/18/2003

WO 01/11359

PCT/CA00/00918

4/4

FIGURE 4
SHOE OF SPECTROPHOTOMETER

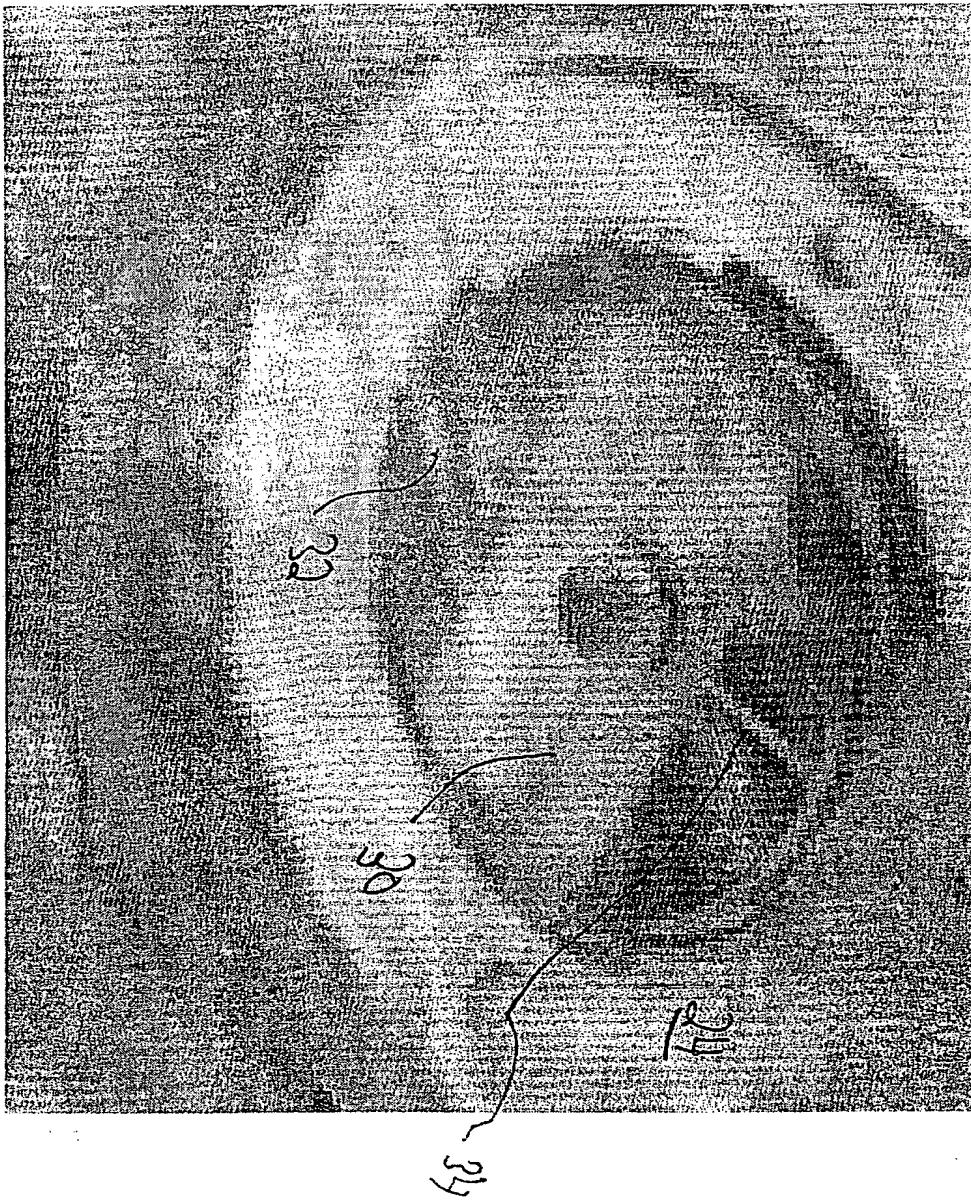


FIGURE 4